



## Installing Easy CD Creator

To install Easy CD Creator:

1. Insert the Roxio Easy CD Creator 5 CD into your CD Recorder or CD-ROM drive.  
**Note:** If Autorun is enabled on your system, the Roxio Installation window appears automatically and you can skip steps 2 and 3.
2. Go to the **Start** menu on the Windows taskbar. Click on Run.
3. In the **Run** dialog box, type X:\SETUP (substitute the letter designation of your CD Recorder or CD-ROM drive for X).
4. Click OK.
5. Follow the installation instructions that appear on the screen.

### Notice

© 2001 Compaq Computer Corporation

COMPAQ and the Compaq logo registered in U.S. Patent and Trademark Office.

All other product names mentioned herein may be trademarks or registered trademarks of their respective companies.

Compaq shall not be liable for technical or editorial errors or omissions contained herein. The information in this document is subject to change without notice.

The information in this publication is subject to change without notice and is provided "AS IS" WITHOUT WARRANTY OF ANY KIND. THE ENTIRE RISK ARISING OUT OF THE USE OF THIS INFORMATION REMAINS WITH RECIPIENT. IN NO EVENT SHALL COMPAQ BE LIABLE FOR ANY DIRECT, CONSEQUENTIAL, INCIDENTAL, SPECIAL, PUNITIVE, OR OTHER DAMAGES WHATSOEVER (INCLUDING WITHOUT LIMITATION DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF BUSINESS INFORMATION), EVEN IF COMPAQ HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE FOREGOING SHALL APPLY REGARDLESS OF THE NEGLIGENCE OR OTHER FAULT OF EITHER PARTY AND REGARDLESS OF WHETHER SUCH LIABILITY SOUNDS IN CONTRACT, NEGLIGENCE, TORT, OR ANY OTHER THEORY OF LEGAL LIABILITY, AND NOTWITHSTANDING ANY FAILURE OF ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.

The limited warranties for Compaq products are exclusively set forth in the documentation accompanying such products. Nothing herein should be construed as constituting a further or additional warranty.

Compaq Computers

First Edition (June 2001)



239784-001

## Types of Media/Discs

Your CD-RW drive records on special media that you can purchase on the Web or at your local retailer. Recommended uses for each media type are listed below.

CD-R media has the following features:

- CD-R discs can be read by virtually all CD-ROM, DVD-ROM, and CD-RW drives.
- CD-R discs are recommended for copying music to and then playing on a home or car stereo.
- CD-R discs are recommended for permanent data storage and archiving.
- CD-R discs can be written to only once. Information written to a CD-R disc cannot be erased from the disc. However, you can write to CD-R discs during multiple recording sessions.

**Note:** When a CD-R disc has been closed (finalized), no additional data or tracks can be written to it.

CD-RW media has the following features:

- CD-RW discs can be used to create CD backups of files or other CDs.
- CD-RW discs can be used when you need to erase the data and rewrite information (for example updating files).
- CD-RW discs can be used to make a practice CD or to test the contents of a CD before making a permanent one.